


Connecting Your Tablet to the Flex Printer


Follow these steps to connect your tablet to the Flex printer.

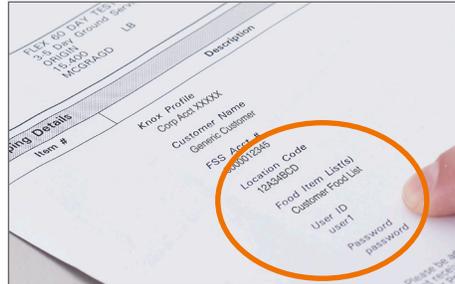


Visit Google Play or the Apple App Store to **install the Prep-n-Print Flex App**.

Your customized Customized Location Code, Username and Password can be found on the packing list.

1. Open the app; **accept/allow permissions** if requested in pop-ups.

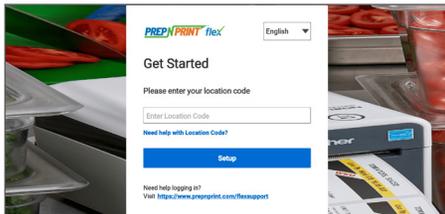

2. Enter the **Location Code** for your location.

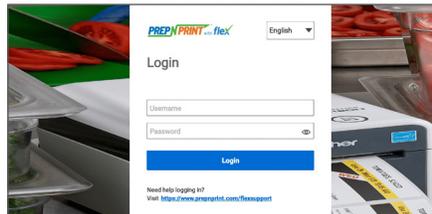


3. **Enter your assigned user name and password.** You may also set the language in which to view the mobile app.




4. Plug in and **turn on the printer**

5. Pair your mobile device to the Flex Printer.

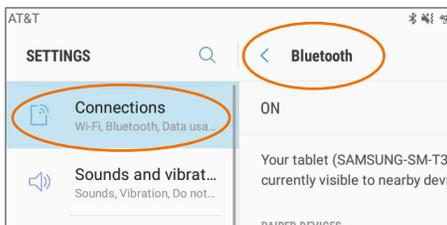

- A. Go to **device settings**.
- B. Ensure you have a network connection (Wi-Fi or cellular).
- C. Locate and **turn on Bluetooth**.

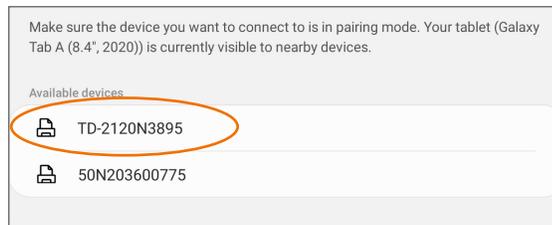


- D. **Locate the Flex Printer by looking for the Brother printer serial number beginning with TD-2120N.**
If you have more than one Flex Printer, use the last several digits of its serial number (found on the underside of the printer) to select the desired printer.




- E. The device will move up to **"Paired Devices"** (Android) / **"My Devices"** (iOS).
- F. **Close device settings.**

In the Flex app you land on your paired & configured printers



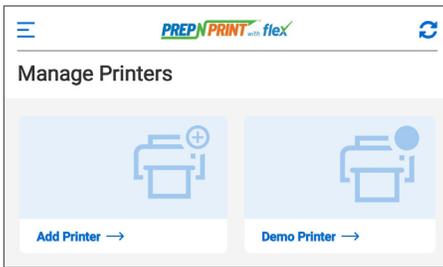


6. Tap "Add Printer".

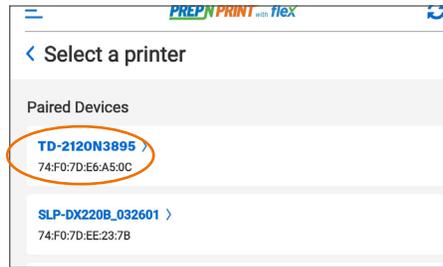


7. Locate and select the **Printer**.

iOS Note: if for any reason the Printer is not connected when entering the App, the "Select a printer" page will be blank. You must return to device settings to re-establish a connection.

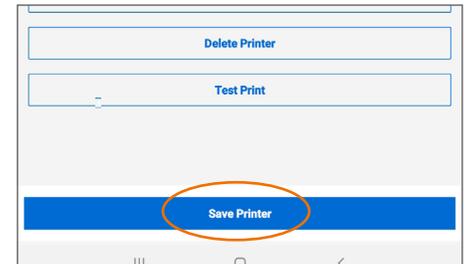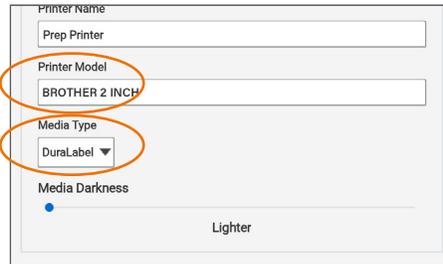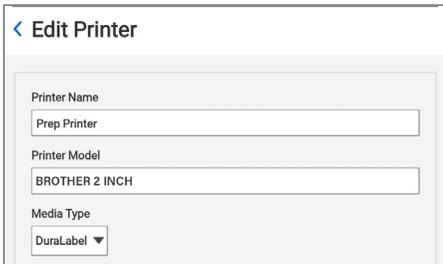


8. By default


- A. Your printer model/serial number is populated in the Printer Name field, but **you can edit it**.
- B. In the Printer Model field, confirm that Brother 2 Inch is set as the default.
- C. Select the **Media Type** that matches the Flex Labels you purchased. **See your label package.**
- D. **No need to adjust Media Darkness.** Default matches your selected Media Type. If subsequently labels are too light or too dark, you can return to this page to adjust this setting.
- E. Select the **Save Printer** button before hitting the Back Arrow or Home Button.

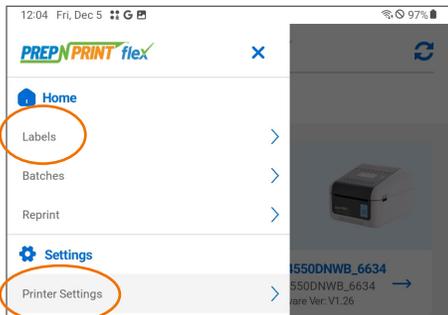

9. **If you have another Flex Printer**, use the **side bar menu** located in the top right to return to "Printer Settings". Otherwise, tap the settings button to view other settings or the Labels button to start labeling.

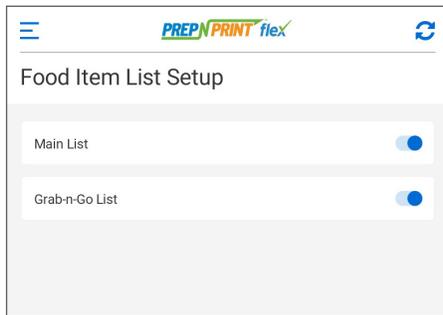

10. Tap on "**Food Management**" to view food lists assigned to your location. By default, all assigned lists are turned on but may be temporarily turned off.

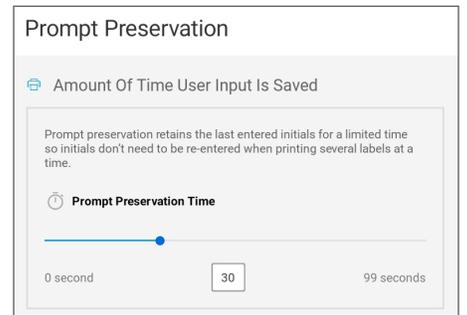

11. Tap "**Prompt Preservation**" to set a limited time in which initials entered on the last label are retained for future use on the next label.